


# Hydraulic Brake Parts

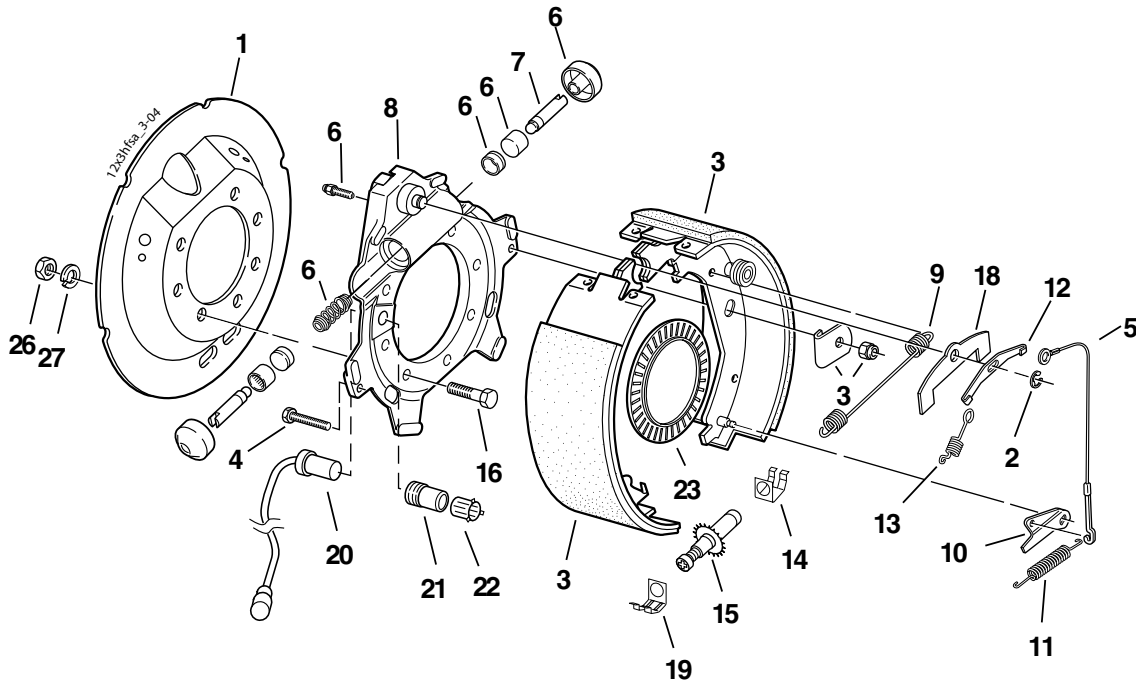

Item	Description	Qty Per Brake	12¼" x 3⅜" 9K, 10K GD, 13G Part No.	12¼" x 4" 10K, 13D Part No.	12¼" x 5" 12K Part No.	12¼" x 5" 15K Part No.
1	Dust Cover	1	036-115-21	036-115-22	036-115-23	036-115-23
2	Retainer	1	069-053-00	069-053-00	069-053-00	069-053-00
3	LH Shoe & Lining Kit Contains:	1	K71-165-00	K71-167-00	K71-169-00	K71-169-00
	LH Primary	1	040-199-01	040-197-01	040-195-01	040-195-01
	LH Secondary	1	040-199-02	040-197-02	040-195-02	040-195-02
	Hold Down Washer	2	005-107-00	005-107-00	005-107-00	005-107-00
	Hold Down Locknut	2	006-086-00	006-086-00	006-086-00	006-086-00
3	RH Shoe & Lining Kit Contains:	1	K71-166-00	K71-168-00	K71-170-00	K71-170-00
	RH Primary	1	040-200-01	040-198-01	040-196-01	040-196-01
	RH Secondary	1	040-200-02	040-198-02	040-196-02	040-196-02
	Hold Down Washer	2	005-107-00	005-107-00	005-107-00	005-107-00
	Hold Down Locknut	2	006-086-00	006-086-00	006-086-00	006-086-00
4	Show Hold Down Screw	2	007-113-00	007-113-00	007-113-00	007-113-00
5	Adjuster Cable	1	071-462-00	071-462-00	071-462-00	071-462-00
6	Wheel Cylinder Kit Contains:	1	K71-081-00	K71-081-00	K71-081-00	K71-082-00
	Cylinder Spring	1	046-128-00	046-128-00	046-128-00	046-129-00
	Cylinder Boot	2	054-032-00	054-032-00	054-032-00	054-032-00
	Cylinder Piston	2	054-038-00	054-038-00	054-038-00	054-030-00
	Cylinder Cup	2	054-086-00	054-086-00	054-086-00	054-087-00
	Bleeder Screw	1	054-035-00	054-035-00	054-035-00	054-035-00
7	Cylinder Push Rod	2	054-033-00	054-033-00	054-033-00	054-033-00
8	Spider Assembly	1	036-063-06	036-063-06	036-063-06	036-063-04
9	Retractor Spring	1	046-087-00	046-087-00	046-087-00	046-087-00
10	LH Adjuster Lever	1	071-464-00	071-464-00	071-464-00	071-464-00
	RH Adjuster Lever	1	071-463-00	071-463-00	071-463-00	071-463-00
11	LH Adjuster Lever Spring (blue)	1	046-135-00	046-135-00	046-135-00	046-135-00
	RH Adjuster Lever Spring (black)	1	046-134-00	046-134-00	046-134-00	046-134-00
12	Cable Attachment Bracket FSA	1	071-456-00	071-456-00	071-456-00	071-456-00
13	Extension Spring	1	046-131-01	046-131-01	046-131-01	046-131-01
14	Adjuster Clip (barrel end)	1	046-133-00	046-133-00	046-133-00	046-133-00
15	LH Adjuster Assembly	1	048-019-00	048-019-00	048-019-00	048-019-00
	RH Adjuster Assembly	1	048-020-00	048-020-00	048-020-00	048-020-00
16	Brake Mounting Bolt	7	007-116-00	007-116-00	007-116-00	007-116-00
18	Piston Stop	1	034-062-00	034-062-00	034-062-00	034-062-00
19	Adjuster Clip (thread end)	1	046-132-00	046-132-00	046-132-00	046-132-00
26	Brake Mounting Nut	7	006-017-00	006-017-00	006-017-00	006-017-00
27	Lockwasher	7	005-008-00	005-008-00	005-008-00	005-008-00
Optional ABS Parts:						
20	ABS Sensor (straight)	1	097-004-00	097-004-00	097-004-00	097-004-00
21	ABS Sensor Mounting Block	1	024-204-00	024-204-00	024-204-00	024-204-00
22	ABS Sensor Retaining Clip	1	097-002-00	097-002-00	097-002-00	097-002-00
23	ABS Tone Ring in Drum	1	024-203-00	024-203-00	024-203-00	024-203-00