


HOW TO MEASURE BOLT PATTERN ON A 5-HOLE WHEEL OR HUB

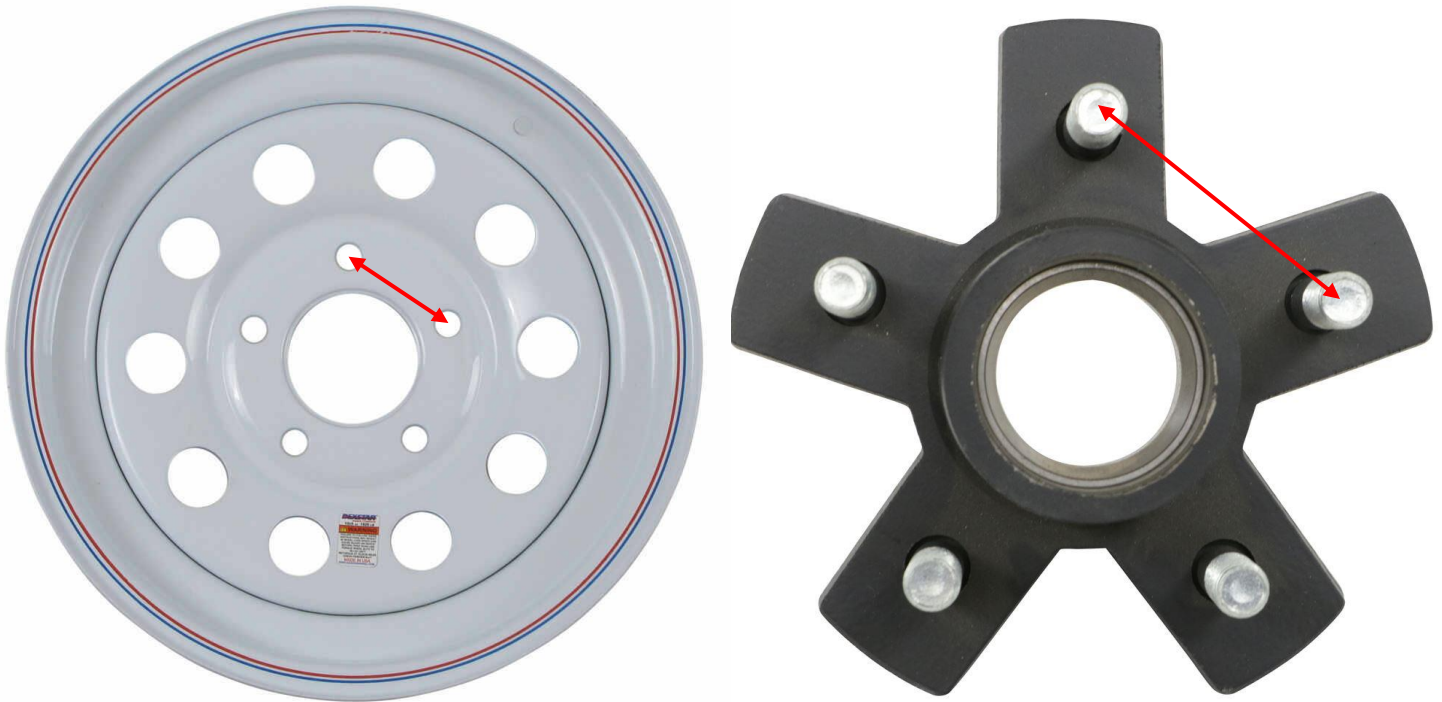

IN ORDER TO DETERMINE THE BOLT PATTERN, MEASURE THE DISTANCE FROM THE CENTER OF A STUD TO AN ADJACENT STUD AS SHOWN ON THE IMAGES ABOVE. IF THE CENTER OF STUD TO CENTER OF ADJACENT STUD DISTANCE IS:

MEASUREMENT	BOLT PATTERN
2-11/16"	5 ON 4-1/2"
2-13/16"	5 ON 4-3/4"
2-15/16"	5 ON 5"
3-1/4"	5 ON 5-1/2"

[SOUTHWEST WHEEL COMPANY](#)

343 GEMBLER RD.
SAN ANTONIO, TEXAS 78219
PHONE: 210.226.0301
[SWWHEEL.NET](#)

